

Troubleshooting Guide for Slider

DOOR NOT ALIGNING

1. Is the tray 100% level?
2. Have the walls been checked at different levels to ensure consistency?
3. Are the fixed panel wall profiles stepped in 20mm from the edge of the tray?
4. Do the finished tile measurements on the tray comply with the adjustment listed on the label and in the specifications book?
5. Has the wall profile or closing profile been adjusted in or out to ensure door closes properly?
6. Are the rollers properly adjusted?
7. Is the top rail level?

DOOR LEAKING

1. Is the bottom seal fitted on the glass panel?
2. Is the upright seal fitted?
3. Is the door sealed correctly?
4. Does the door seal need to be reduced in length so the door closes fully into the closing profile?

OTHERS

1. Door is hitting the bottom of the glider - adjust rollers to raise door
2. Opening space is too small – need to reduce the roller stop length
3. Rubbing/scratching noise when door is being opened and closed – locating pin is not adjusted.
Must be in centre of slot on the top rail