

Troubleshooting Guide for Hinge Door without Side Panel



Any fitting issue with the fixed glass panel/door not lining up, or door or not closing correctly,
CHECK THE TRAY, IT MUST BE 100% LEVEL IN ALL DIRECTIONS FOR CORRECT INSTALLATION.

A Issue: Fixed glass panels are difficult to adjust in and out of the wall profile

Remedy 1: SEE STEP 4: Ensure that all adjusting screws in the wall profile are loosened (not necessary to be removed). TIP: When pushing the glass in and out of the wall profile, angle the glass panel slightly towards the inside of the tray, then adjust in and out of the wall profile, finally straightening back onto tray.

B Issue: Door panel and big fixed panel are not the same level on top

Remedy 1: STEP 6: Ensure the door panel hinges are fully inserted into the fixed panel hinges i.e. Ensure there is not a big gap between the moving panel hinge and fixed panel hinge when door is closed.

Remedy 2: STEP 1: Check the tray is level – TRAY MUST BE 100% LEVEL

Remedy 3: STEP 4: Adjust the glass panels in and out of the wall profiles - tilting glass upwards and downwards slightly (pulling out at the top or bottom of profile)

C Issue: Gap at the top or bottom between the magnets

Remedy 1: STEP 3: Check that the hinge and inline fixed panel and magnetic upright profile are square and plumb at the edge

Remedy 2: STEP 8: Adjust the wall profile which holds the magnetic upright profile (VF1006) horizontally where fixed to the wall, in /out at the top to close the gap

D Issue: When opening the door, the hinge on the door panel rises up but does not sit back down when the door is closed

Remedy 1: STEP 6: Ensure the hinges are square on the moving and fixed glass panels – IF NOT: Remove door from fixed panel then, using hex key provided, adjust hinges to square by first loosening, then re-tightening to correct position on glass panel.

Remedy 2: Use lubricant (i.e. Silicone lubricant spray/grease) on the pin and nylon butt.